

PLATINUM

V i e w M a s t e r

SAFELY INTO
THE FUTURE



SAFELY INTO THE FUTURE

PLATINUM

ViewMaster

Central readout of photovoltaic equipment

- Due to technical reasons, solar power inverters often need to be assembled in a place different than the one that would be desirable for convenient viewing. The **PLATINUM-ViewMaster** provides a **comfortable and central readout possibility** for the whole PV-equipment far from the assembly spot of the power inverters.
- The **PLATINUM-ViewMaster** also grants a central overview, locally, when **many PLATINUM power inverters** are in operation.
- **Concise overview** over the updated sum of the charging activity of all the power inverters.
- **Graphic presentation** of the activity and output of the single power inverters for different periods of time.
- The **connection** between **ViewMaster** and the power inverters is to be easily done, through the provided plug cable.

PV-equipment



PLATINUM-power inverters



Equipments

Connection between the power inverters and the ViewMaster through a patch cable (EIA 485-bus) – included in the package contents



PLATINUM-ViewMaster
Readout of the power inverters data

On the **ViewMaster** you can read out the updated data of your PV-equipment from a place that you find convenient and comfortable.

Central readout for PV-equipments with up to 63 PLATINUM power inverters, especially when the place of the readout differs from the assembly location of the power inverters.

A distance of up to 500 m between the power inverters and the **ViewMaster** is possible.



Adequate for all PV-equipments with power inverters. We will gladly provide you with more information about the use and operation.

- Concise overview over the activity of the whole equipment.
- Visual analysis of the activity and output of the single power inverters for different periods of time such as days, weeks, months or years.
- Text notices about power inverters events.
- Integrated data logger.
- Clear status indication through 2 LEDs.
- Operation as easy as the one of the PLATINUM power inverters.
- Easy installation and start up; also possible subsequently.

SAFELY INTO THE FUTURE



PLATINUM

ViewMaster

Technical data

Data presentation	LC-graphic display with backlight
Status indication	2 LEDs
Status indication	ext. wall power supply (included in the package contents)
Interface	2 x EIA485 RJ 45 slide-on receptacles and strip terminals for the PLATINUM power inverters network 2 x EIA485 RJ 45 slide-on receptacles and strip terminals for external devices
Operation conditions	0 .. + 40 °C; dry internal spaces
Assembly	Wall assembly with brackets
Measurements (L x W x H)	221 x 285 x 64 mm



Package contents

ViewMaster	Article-Nr. 239411
Ext. wall power supply	
Data cable 1 m	Article-Nr. 239407
Assembly and operation instructions	

Valid from February 2007 Subject to change without notice VM EN 0207



SAFELY INTO THE FUTURE



Distributed by: Power Sources Unlimited, Inc., Wrentham, MA
Tel: 508-384-1419 | E-mail: sales@psui.com | Website: www.psui.com